

VI.5.3D-RRSALLTS PROGRAM FCST HCL TECHNIQUE RRSALLTS

Purpose

Technique RRSALLTS sets whether river, reservoir and snow time series data are to be printed.

Valid values are NO (0) and YES (1).

The Global default value is NO (0).

This Technique is Universal.

Form of Input

RRSALLTS (integer)

where integer is 1 or 0 specifying whether or not to print data

Example

RRSALLTS (1)

The river, reservoir and snow time series data will be printed.